

EFFECTS II QUICK REFERENCE CARD

MENU 4: MUSICAL KEYBOARD (Continued)

With Internal Keyboard Selected:

- | | | |
|------------------|---|---|
| Keys Z, S, X, D, | — | Reproduce Sounds Musically (See Screen) |
| C, V, G, B Etc. | — | Select Sound to be Played |
| Selections 1-8 | — | Change Sound Direction |
| <— —> | | |

With External Keyboard Selected:

- | | | |
|---|---|---------------------------------------|
| Left-most 1-8 Keys on "External" Keyboard | — | Select Sound |
| Selections 2-3 | — | Syntauri or Passport Keyboard |
| Selection 4 | — | Enter Syntauri or Passport Slot (0-7) |

MENU 5: AUTOSEQUENCE

- | | | |
|-----------------|---|--|
| Selection 1 | — | Return to Main Menu |
| Selection 2 | — | Select 1 of 5 Groups (See Manual) |
| Selection 3 | — | Enter information into the Groups (See Manual) |
| Selection 4 | — | Play the Sequence |
| Selection 5 | — | Continuously Repeat the Sequence |
| Selection 6 | — | Display the Load/Save Sub-Menu |
| Selection 7 | — | Enter New Volume (0-15) |
| Selection 8 | — | Enter New Mode (2-7) |
| Selection 9 | — | Enter New Tempo (1-15) |
| Keys A, S, D, F | — | Play Groups 1, 2, 3, 4 Respectively |

MENU 6: TUNE MAIN MENU

- | | | |
|----------------|---|--|
| Selection 1 | — | Return to Main Menu |
| Selection 2 | — | Select "Enter Tune Values" Screen (See Manual) |
| Selection 3 | — | Select "Load/Save Tune" Sub Menu |
| Selection 4 | — | Enter New Volume (0-15) |
| Selection 5 | — | Enter New Mode (2-7) |
| Selection 6 | — | Select Sound 1-8 (According to Mode) |
| Selections 0-P | — | Change Octave (1-8) |

MENU 7: EXTERNAL INTERFACE

- | | | |
|-------------|---|--|
| Selection 1 | — | Return to Main Menu |
| Selection 2 | — | Enable/Disable Input Sync Pulse |
| Selection 3 | — | Toggle Input Sync Polarity (High or Low) |
| Selection 4 | — | Enable/Disable Output Sync Pulse |
| Selection 5 | — | Toggle Output Sync Polarity (High or Low) |
| Selection 6 | — | Output Pulse Duration Selection (.1, 1 or 5ms) |

MENU 8: LOAD/SAVE SOUNDBASE